



# X-Street STR Viper Wheel Replacement

This will be a quick guide in showing you how to remove a worn out tire from your car.

Written By: Ian Johnson



## INTRODUCTION

This guide will involve the quick removal of one of the wheels to either be replaced or to have the car axis cleaned.


---



### TOOLS:

- [Metal Spudger Set](#) (1)
  - [Phillips #2 Screwdriver](#) (1)
-

## Step 1 — Wheel

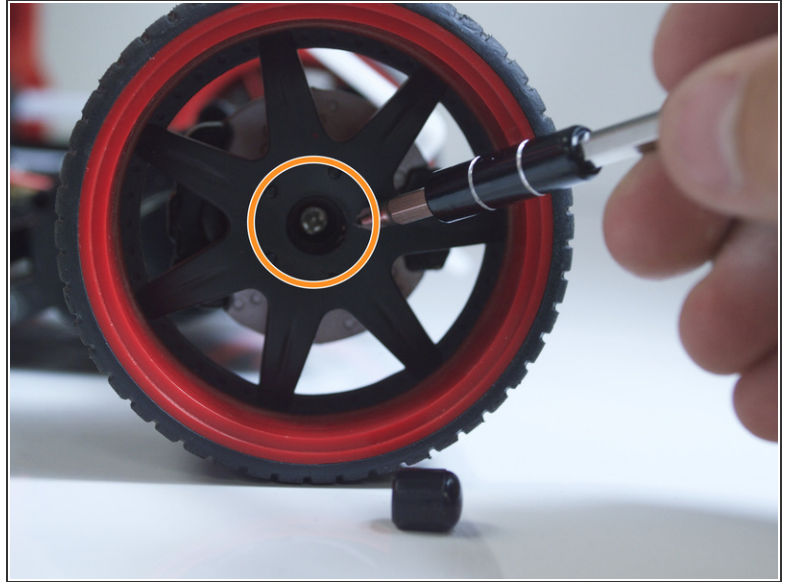

- **Remove the wheel.** Begin by grabbing your metal spudger or a guitar pick to pop off the plastic cap in the middle of the wheel.
- Use the #2 Phillips screwdriver to remove the 4mm Phillips #2 screw inside the wheel.
- From here you should be able to easily pull off the wheel from the car and you're finished!

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-07 06:48:51 AM.